Pull-Out Blinds



Pull-Out Blinds are a simple solution in helping keep your outdoor living area cool and comfortable by reducing the heat and glare coming through the roof, especially under a polycarbonate (Laserlite) roof.

Pull-Out Blinds can be mounted under a pergola frame or they can span across an open area between 2 structures.

The Blinds can be made up to 5m wide with a 3m projection or with a narrower width can have up to 5m projection, large areas can be covered by dividing into smaller manageable blinds that can also allow for more versatility in shading the area.

The Pull-Out Blinds can be made in a variety of fabrics with a large selection of different colours available. The most popular fabrics are Shade Mesh, with either a 94% or 99% blockout, they offer the best shade while still allowing filtered light though to maintain a comfortable ambient lit area.



Key Features

- Easily installed under existing pergolas
- Spans open areas between structures
- Easy operation using crank handle & rope and pulleys
- Custom made to suit
- Mill finish or custom colours available for Guide tracks and cross bars
- Choice of Shade mesh or acrylic canvas
- Wide range of fabric colours available
- Colorbond Hood available (protects blind when retracted in open areas)
- Minimalist look





Pull-out Blinds styles

Manual clip-on option

With this style, the blind is unwound using the crank handle and the front bar of the blind lowers down until there is enough fabric off the roll. The front bar is picked up and then clipped onto the fixings at the other end, once attached then blind is retracted using the crank handle to tension the fabric.

To retract, simply release the tension, unclip the front bar and crank the blind back until closed. Benefits of the manual clip on option is it is very clean an minimalist when retracted, no guides or rope hanging around.

Usually used where the front clip on point can be reached from the ground without climbing ladders.

Guides with rope & pulley option

With this style the front bar of the blind is supported by the guides so when the blind is unwound using the crank handle, the front bar stays up high and the fabric unwinds in a large loop off the roll. Once enough fabric is off the roll for the desired coverage, the rope and pulley system is used to pull the front bar along the guides until the fabric is tight

To retract, simply loosen the rope and pulley at the front and use the crank handle to wind the blind back until it is fully retracted

This system is usually used where the front fixing point is too high to reach from ground level.

COOLABAH SHADES

10A Capella Crescent Moorabbin Ph 03 9078 4533 info@coolabahshades.com.au www.coolabahshades.com.au